

# BAOFENG

## UV-5R

### Basic Operations

Top View



SMA Antenna

LED LIGHT

ON/OFF VOL Knob

Left Side



CALL KEY

PTT KEY

MONI Button

A/B SELECT KEY

A/B INDICATOR

Channel Name

MEM/FREQ KEY

STATUS LED



BAT INDICATOR

Channel #

CHANNEL UP/DOWN NAVIGATION KEYS

LOCK/ HI-LO POWER KEY

- To turn **Power On/Off**, Turn **on/off knob** clockwise.
- To **Increase Volume**, rotate the **on/off knob** clockwise.
- To toggle between **VFO/Frequency** (V) or **Memory/Channel** (MR) modes, press **VFO/MR**  
>> Note: You are in Memory/Channel Mode when you see the Channel # in the display.
- To select a Channel (e.g. Ch 26 PAL730) use white up down arrow keys on keypad to navigate between channels.
- To **Lock/Unlock Keypad**, press the "lock" key until you hear "lock" a small key symbol will appear next to the battery indicator on the display.
- To use the **LED** light press the MONI key momentarily. Press again and it flashes. Press again and it goes off.
- To switch **High/Low** power press "lock" key momentarily to toggle between hi and low