


BAOFENG

UV-5R

Basic Operations

Top View

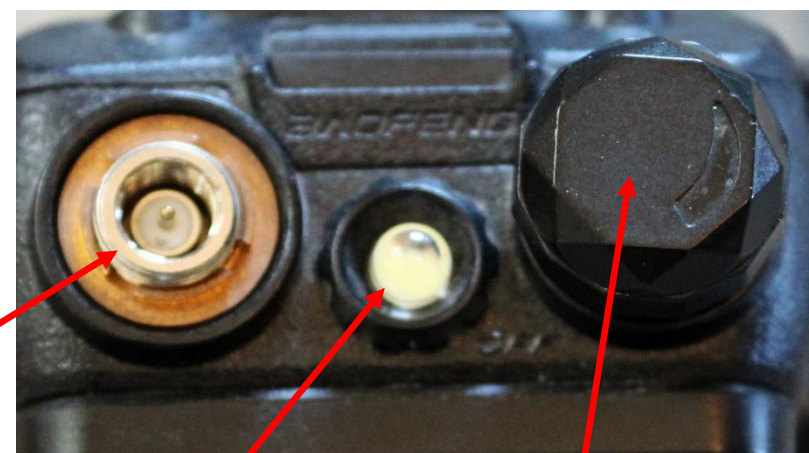

SMA Antenna

LED LIGHT

ON/OFF VOL Knob

Left Side



CALL KEY

PTT KEY

MONI Button

A/B SELECT KEY

A/B INDICATOR

Channel Name

MEM/FREQ KEY

STATUS LED



BAT INDICATOR

Channel #


CHANNEL UP/DOWN NAVIGATION KEYS

LOCK/ HI-LO POWER KEY

- To turn **Power On/Off**, Turn **on/off knob** clockwise.
- To **Increase Volume**, rotate the **on/off knob** clockwise.
- To toggle between **VFO/Frequency** (V) or **Memory/Channel** (MR) modes, press **VFO/MR**
>> Note: You are in Memory/Channel Mode when you see the Channel # in the display.
- To select a Channel (e.g. Ch 26 PAL730) use white up down arrow keys on keypad to navigate between channels.
- To **Lock/Unlock Keypad**, press the "lock" key until you hear "lock" a small key symbol will appear next to the battery indicator on the display.
- To use the **LED** light press the MONI key momentarily. Press again and it flashes. Press again and it goes off.
- To switch **High/Low** power press "lock" key momentarily to toggle between hi and low

Baofeng UV5R

Layout & Keypad Functions

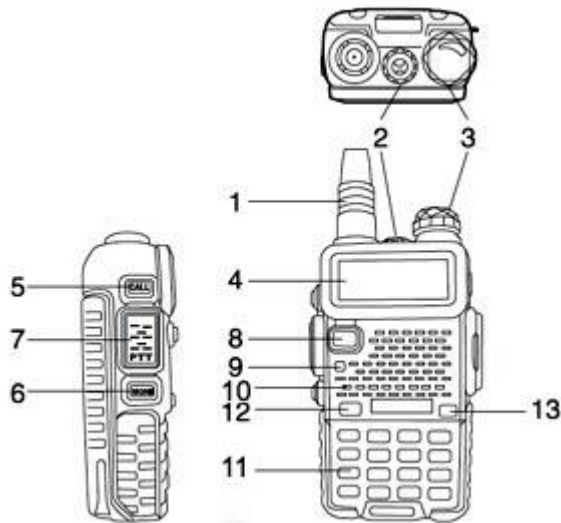

1. Antenna
2. LED Flashlight
3. Knob (ON / OFF / volume)
4. LCD
5. Side Key 1 / CALL (radio / alarm)
6. Side Key 2 / MONI (flashlight / monitor)
7. PTT Key (push-to-talk)
8. VFO / MR (frequency mode / channel mode)
9. LED (transmit / receive indicator)
10. Microphone
11. Keypad
12. A/B Key (frequency display switch)
13. Band Key (switches band)



[PTT] (Push-to-Talk)

- Press [PTT] and Hold to transmit, release to receive.

[CALL] Side Key 1

- Press [CALL] button to activate the FM radio; Press again to deactivate.

Press the [*SCAN] button to scan the FM channels.

- Press and Hold [CALL] button to activate the alarm function;

Press and Hold again to deactivate.

[MONI] Side Key 2

- Press the [MONI] button to turn on the flashlight.

Press again to turn it off.

- Press and Hold the [MONI] button to monitor a signal / open squelch.

[VFO/MR] Button

- Press the [VFO/MR] button to switch between these two modes.

- VFO = Frequency Mode - MR
(Memory Recall) = Channel Mode

[A/B] Button

- Press the [A/B] button to switch the frequency display.

- A Display = uppermost FREQUENCY /

CHANNEL / NAME Display

- **B Display = lowermost FREQUENCY / CHANNEL / NAME Display**

[BAND] Button

- Press the [BAND] button to switch band display in frequency mode.
- While FM radio is activated, press the [BAND] button to switch the band of the FM radio (65-75MHz / 76-108MHz).



[*SCAN] Key

- Press the [*SCAN] key to activate the Reverse function.

It will exchange the TX and RX frequencies.

- Press the [*SCAN] key for 2 seconds to start scanning (freq / chan).
- While FM radio is activated, press the [*SCAN] key to search FM radio stations.
- While setting the RX CTCSS/DCS, press the [*SCAN] key to scan the RX CTCSS/DCS

[#] Key

- Under channel mode, press the [# ] key to switch High/Low power.
- Press the [# ] key for 2 seconds to lock/unlock the keypad.