

# Yaesu FT-60

## Basic Operations



### FT-60 Quick Reference Card

- To turn **Power ON/OFF**, rotate **On/Off/VOL Knob** closest to antenna clockwise.
- To increase **VOLUME**, rotate **On/Off/VOL Knob** clockwise.
- To toggle between **VFO/Frequency (V)** or **Memory/Channel (M) Modes**, press **V/M**. **NOTE:** You are in Memory/Channel Mode when you see the small **Channel #** in the display. You will also briefly see the word **"MEMORY"** appear on screen just before it switches to memory mode.
- To select a pre-programmed **Channel** (e.g. Ch 26 PAL730), turn the Top Right Knob (**Freq Select Knob**).
- To momentarily toggle between **Name/Frequency** in the display in Memory/Channel Mode, press **BAND**. Press **BAND** again to return. **Note:** The cache radios are programmed to display Channels as Names, not Frequency.
- To adjust **Squelch**, rotate the **Lower Right Dial (SQL Adjust)** to the *minimum* needed to eliminate noise.
- To **Change Transmit (Tx) Power**, press **FW** then **TX PO**
- To **Lock/Unlock the Keypad**, press **FW** then press **LOCK (6)** button for 1 second
- To turn on keyboard back lighting, press **LAMP** switch. The keyboard display will light for 5 seconds. To activate the lamp **continuously**, press **FW** first then the **LAMP** switch. To turn off press lamp switch again.