



YAESU VX-6

TRI-BAND BASIC OPERATIONS

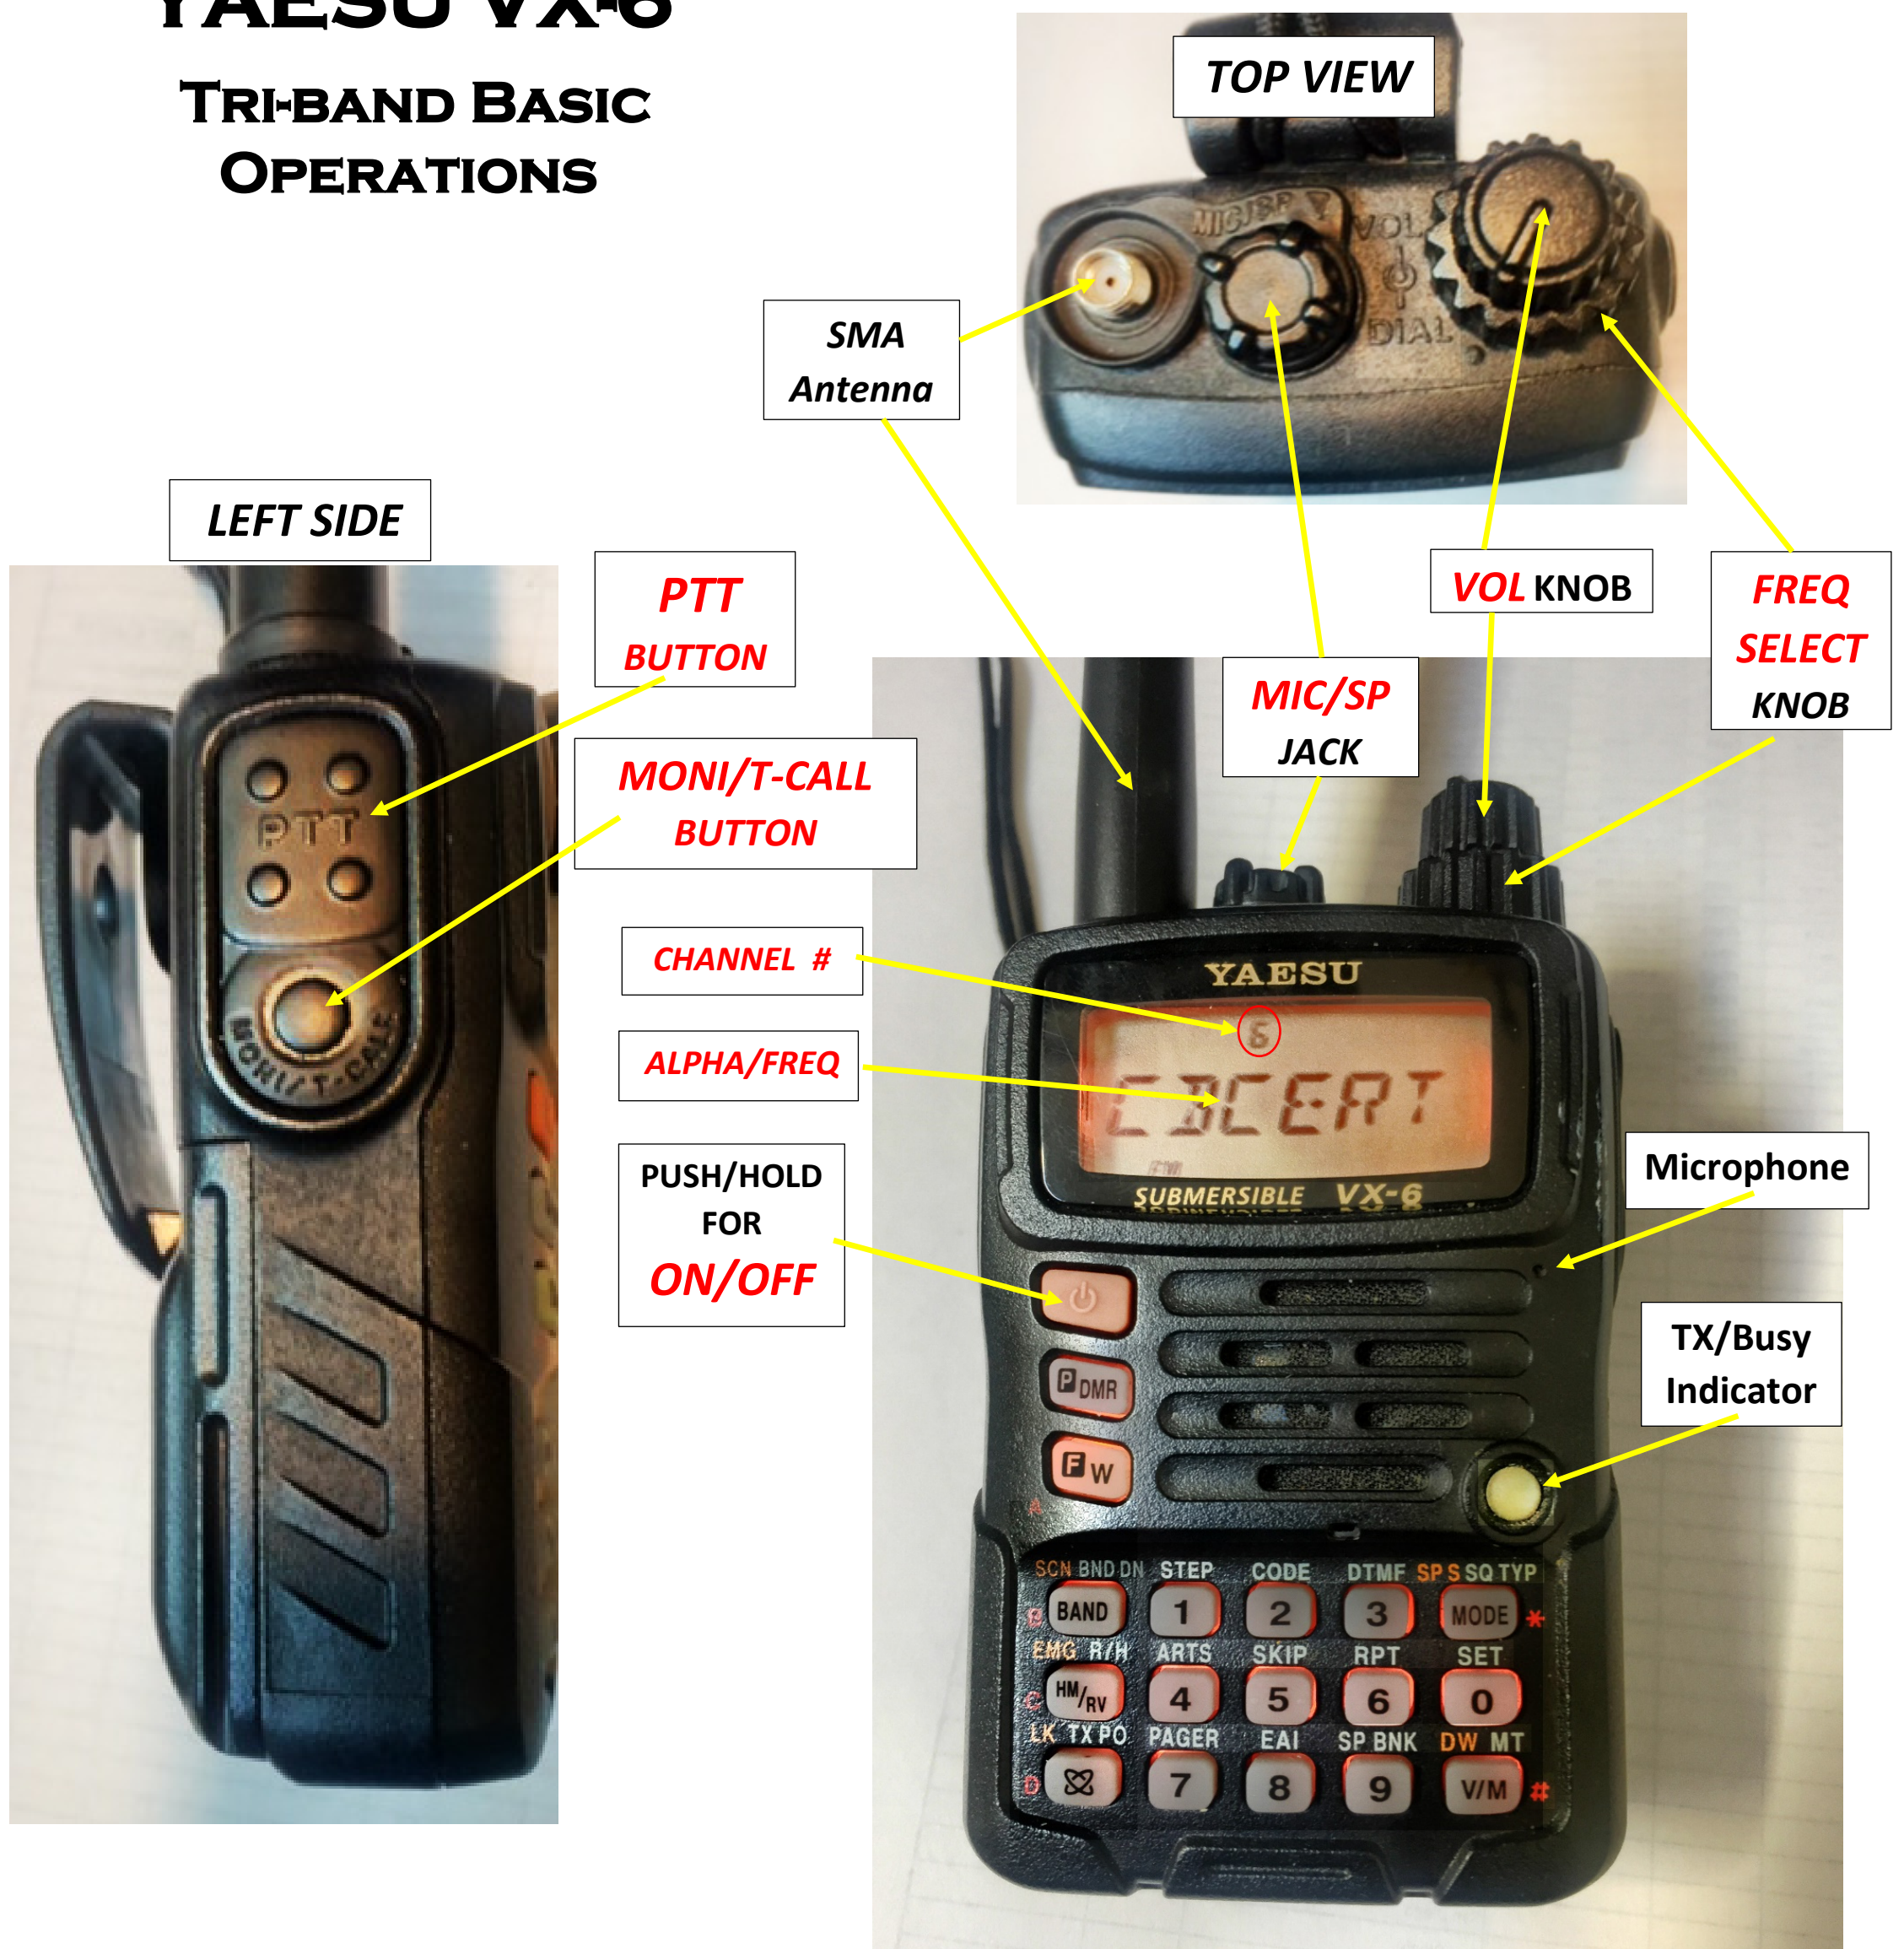

- **TURN POWER ON/OFF** by pushing down the ON/OFF BUTTON 2 SECONDS 
- **SELECT CHANNELS** by rotating the FREQUENCY SELECT KNOB
- **TO momentarily TOGGLE BETWEEN FREQUENCY/ALPHA** display press **MONI**
- **TO TOGGLE BETWEEN VFO(V) or MEMORY (M) MODES** press **V/M**
- **LOCK/UNLOCK KEYPAD** by pressing **LK/TX/PO** for 1 SECOND
- **DUAL WATCH** Press **DW** for 1 SECOND
- **SQUELCH ADJUST** Press **FW** then **MONI/T-CALL** to adjust squelch; Press **PTT** to save setting
- **CHANGE TRANSMIT (TX) POWER LEVEL** by pressing **FM** then press **LK/TX/PO**
 - HIGH= 5 Watts
 - LOW3= 2.5 Watts
 - LOW2= 1 Watt
 - LOW1= .3 Watt